6 TECHNICAL INFORMATION

6.1 Host Port Connector (rear panel)

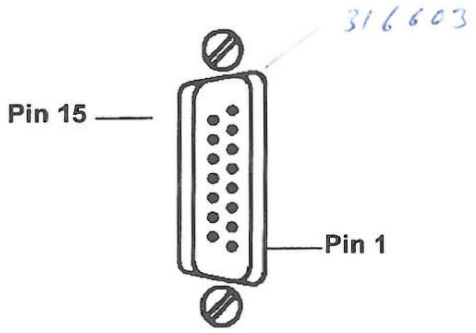

Important! For use ONLY with equipment conforming to IEC-601.

Pin	Function
1	Ground
2	Inverted TTL Transmit Data
3	Inverted TTL Receive Data
4	Fused +5 volts
5	No connection
6	No connection
7	Ground
8	No connection
9	RS232 Request to Send (RTS)
10	RS232 Clear to Send (CTS)
11	RS232 Transmit Data (TxD)
12	No connection
13	RS232 Receive Data (RxD)
14	No connection
15	No connection

6.2 Remote Alarm Connector (rear panel)

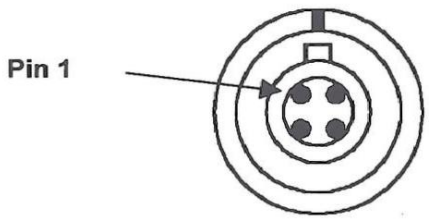

Important! For use ONLY with equipment conforming to IEC-601.

Relay contact Maximum rating: 25V AC / 60V DC @ 1 A

Pin	Normal Condition	Alarm Condition
1	Contact Closed	Contact Open
2	Common	Common
3	Contact Open	Contact Closed
4	No Connection	No Connection

Note: Pins are numbered anti-clockwise when viewed from rear of monitor.